



DS400-HDM

12V / 24VDC (230VAC)

High Definition Digital Satellite Receiver
PVR Ready

IMPORTANT SAFETY INSTRUCTIONS



All the safety and operating instructions should be read before operating this product. The safety and operating instructions should be retained for future reference. All warnings on the product and in the operating instructions should be adhered to. All operating and usage instructions should be followed. Unplug this product from the wall outlet before cleaning.

- Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning and place the receiver in well ventilated and no-heat environment.
- Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near swimming pool, and the like.
- Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or an adult and serious damage to the product.
- Use only with a cart, stand tripod, bracket, or table recommended by the manufacturer or sold with the product.
- Any mounting of the product should follow the manufacture's instructions, and should use a mounting accessory recommended by the manufacturer.
- This apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus.
- The main plug is used as the disconnect device. The disconnect device shall remain operable.

Instruction about the 'WEEE' Symbol



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CONTENTS

1. Introduction

- 1-1 Main Features
- 1-2 Accessories

2. Controls & Features

- 2-1 Front Panel
- 2-2 Rear Panel
- 2-3 Remote Control Unit(RCU)

3. Connection Diagram of the Receiver

- 3-1 Connecting to the antenna
- 3-2 Connecting to TV and VCR
- 3-3 Connecting to HiFi system
- 3-4 Connecting to TV with VCR and Motorized System (DiSEqC 1.2 / USALS)

4. Function Guide

- 4-1 Channel Information
- 4-2 Changing Channels
- 4-3 Volume Control
- 4-4 Channel List for TV/Radio/Favorite
- 4-5 Program Guide
- 4-6 Teletext
- 4-7 Subtitles
- 4-8 A/V Selection

5. Main Menu

- 5-1 Installation
- 5-2 System Setting
- 5-3 User Preference
- 5-4 Common Interface
- 5-5 USB Manager

6. PVR Ready

- 6-1. Recommended Device
- 6-2. Recording function

7. Troubleshooting

8. Technical Specifications



1-1 Main Features

64 programmable satellites / 6,000 programmable channels
950~2150 Mhz IF range
2 Slot Common Interface
DVB-S/DVB-S2 Compliant (EN 300307)
MPEG2 MP@HL, MPEG4 Part10/H.264
1 LNB input, IF loop through for 2nd receiver
Variable input symbol rate 1 ~ 45Msps
Easy auto satellite program searching
Multi language menu
Electronic Program Guide
8 favorite channel group selection / parental lock
Auto NTSC / PAL switching
Teletext supported by OSD and VBI
USB / RS 232 downloading
Data transfer / PC-to-receiver
DiSEqC version 1.0/1.1/1.2/1.3 supported
USB 2.0 Master
HDMI
Video Resolution 1080i, 720p, 576i, 576p, 480i, 480p

 
1-2 Accessories

User's manual : 1
Remote control unit : 1
Batteries (AAA Type) : 2
AC/DC Adaptor: 1 (including power cord)
Cigarette Lighter: 1
External IR Sensor: 1
HDMI Cable: 1
SCART Cable: 1
Mounting Brackets: 1



2. Controls & Features

2-1 Front Panel

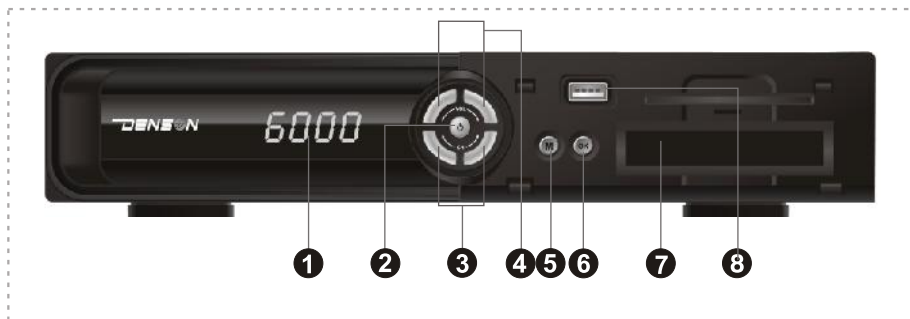


- ① **Display**
- ② **Power (⏻)**
Power on & off
- ③ **CH. ▲, ▼**
Channel up & down.
- ④ **VOL. ▲, ▼**
Volume up & down.
- ⑤ **Menu**
Used to display the main menu.
- ⑥ **OK**
To show TV/Radio channel list and to select a program.
- ⑦ **2 slots Common Interface**
- ⑧ **USB Port**
Connect to the USB memory or external HDD

2. Controls & Features



 2-2 Rear Panel

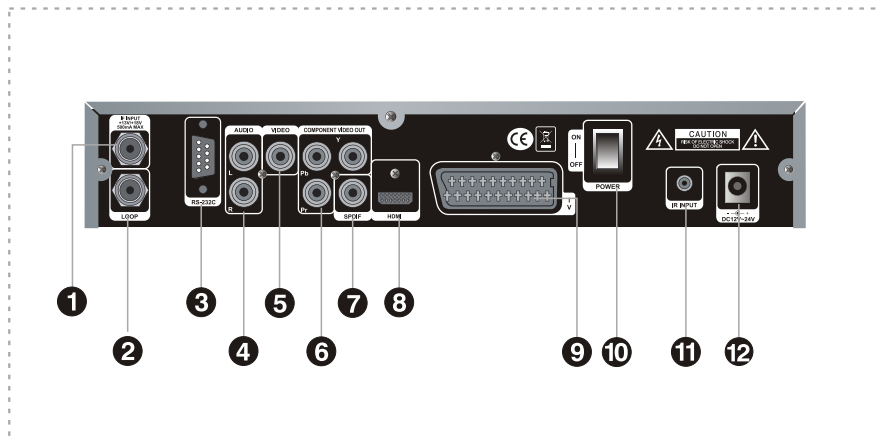


- ① **IF INPUT :**
Satellite broadcasting signal input socket.
- ② **LOOP :**
IF loop-through output to second receiver
- ③ **RS232C :**
Serial port for upgrade and data transfer.
- ④ **AUDIO L/R :**
Stereo audio output socket for the television set or the audio system. (White/red)
- ⑤ **Video RCA Connector :**
Composite Video Output
- ⑥ **COMPONENT :**
For Connection to LCD or PLASMA TV
- ⑦ **S/PDIF :**
Dolby Digital output socket for the audio system.
- ⑧ **HDMI :**
Audio and video output socket for the high definition television set.
- ⑨ **TV (SCART) :**
Audio and video output socket for the television set.
- ⑩ **Power On/OFF Switch**
- ⑪ **IR INPUT :**
External IR sensor
- ⑫ **DC12V~24V :**
For connection to AC/DC Adaptor or Cigarette Lighter



2. Controls & Features

 2-3 Remote Control Unit (RCU)

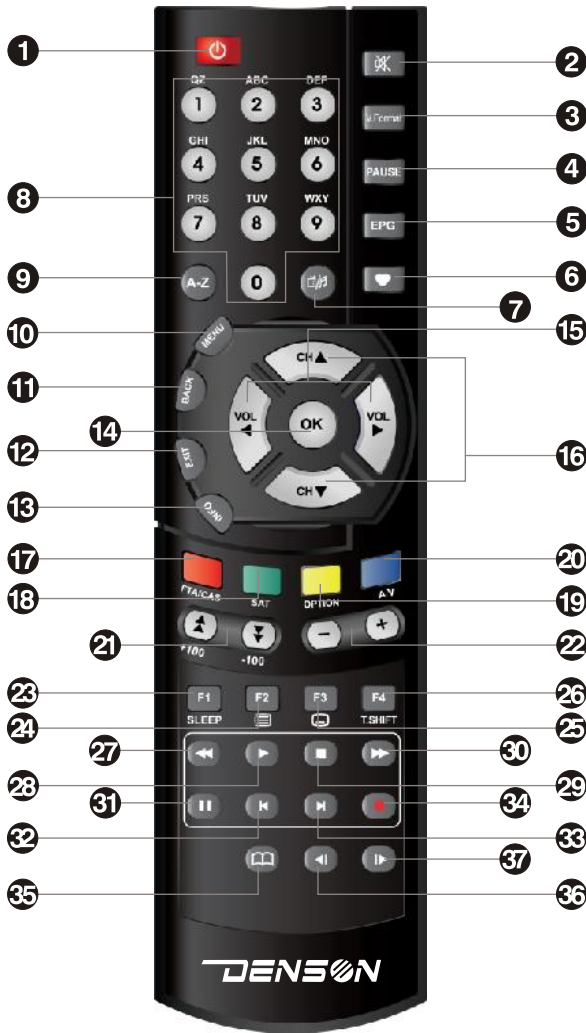

2. Controls & Features




2-3 Remote Control Unit (RCU)

- ① **⏻ (POWER)** : turns the receiver on and off.
- ② **🔇 (MUTE)** : switches the sound on and off.
- ③ **V.Format** : changes the video format.
- ④ **Pause** : pauses the screen while viewing but audio remains active.
- ⑤ **EPG** : shows program information about the selected channel.
- ⑥ **♥ FAV** : opens Filter box for favorite channel.
- ⑦ **📺/📻** : selects TV mode or Radio mode.
- ⑧ **Numeric (0~9)** : enables to select channel directly.
- ⑨ **A-Z** : used for channel sorting.
- ⑩ **MENU** : displays the main menu
- ⑪ **BACK** : returns to the previous mode or menu.
- ⑫ **EXIT** : returns to the viewing mode from any menu mode.
- ⑬ **INFO** : displays channel information.
- ⑭ **OK** : selects a program, the highlighted line or parameter value or shows the TV/radio channel list while watching TV or listening to the radio.
- ⑮ **VOL. ◀▶** : moves the highlighted line or changes volume up/down.
- ⑯ **CH. ▲▼** : moves the highlighted line or changes channel up/down.
- ⑰ **FTA/CAS** : opens Filter box for FTA/CAS.
- ⑱ **SAT** : opens Filter box for satellites.
- ⑲ **OPTION** : displays **Multifeed** box.
- ⑳ **A/V** : displays the audio and video configuration.
- ㉑ **▲(+100), ▼(-100)**(Page up/down button)s : moves the highlighted line to the next page or changes the channel up/down by 100 channels.
- ㉒ **+, -** : Used to move the highlight bar, change parameters, and volume up/down.
- ㉓ **F1(SLEEP)** : Sleep function in the viewing mode.
- ㉔ **📖** : displays teletext available.
- ㉕ **📄** : displays subtitle available.
- ㉖ **T.SHIFT** : setup Time-Shift function On/Off
- ㉗ **◀◀(Rewind)** : Rewind video play speed to 2X4X8
- ㉘ **▶▶(Play)** : playing files.
- ㉙ **■ (Stop)** : stop playing files.
- ㉚ **▶▶(Fast Forward)** : fast forward Play speed by 2X4X8
- ㉛ **⏸ (Pause)** : pause playing file.
- ㉜ **⏮** : jumps backward.
- ㉝ **⏭** : jumps forward.
- ㉞ **● (Record)** : starts recording
- ㉟ **🔖 (Bookmark)** : Bookmark function under view mode Go to the bookmarked position.
- ㊱ **◀|** : play slow backward playing file
- ㊲ **|▶(Slow)** : play slow forward playing file

RED, GREEN, YELLOW, BLUE : These color buttons are used to select functions such as Delete, Move, Rename, Sort.

 3. Connection Diagram of the Receiver

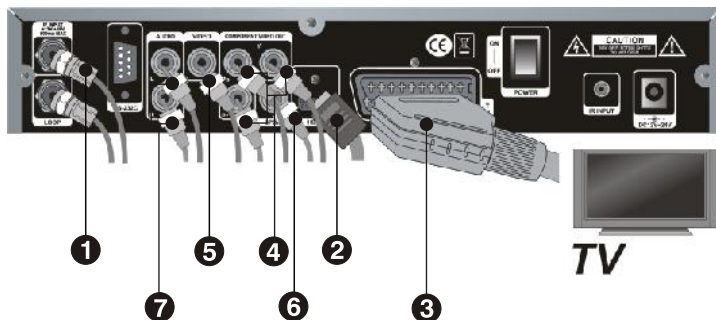

3-1 Connecting the antenna

- 1** Connect the antenna cable to the IF INPUT connector.
If you have another digital receiver, link it to the LOOP THROUGH connector.

3-2 Connecting to a TV

- 2** HDMI : Plug one side of the HDMI cable into the HDMI socket on the digital receiver and the other side of it into the matching socket on TV.
If you have a high definition TV set, HDMI gives the best results.
In addition, you don't have to make audio connections because the HDMI connector can output stereo audio or Dolby digital audio.
- 3** SCART (TV) : Plug side end of the SCART cable into the TV socket on the digital receiver, and the other side of it into the matching socket on TV.
You do not have to make audio connections unless you use a conversion cable, such as SCART-to-Component. If not, you have to make audio connections.

3. Connection Diagram of the Receiver



- ④ Component connector (YPbPr) : Plug each side of the RCA cables into the matching color sockets (BLUE, GREEN and RED) on the digital receiver, and the other side into the matching color sockets on TV.

! You have to make audio connections.

- ⑤ VIDEO : Plug one side of the RCA cable into the VIDEO(yellow) socket on the digital receiver and the other side into the matching socket on your TV.

! You cannot view high definition video with the composite connector. In addition, you have to make audio connections.

3-3 Connecting to HiFi System

- ⑥ You can enjoy Dolby digital audio by connecting S/PDIF cable to your digital audio systems. In this case TV or audio system must be able to decode Dolby digital audio.
- ⑦ In order to get stereo sound, you need to connect RCA cable from the AUDIO L/R sockets on the receiver to the LINE, AUX, SPACE or EXTRA input sockets on your HiFi system.

3-4 Connecting to Motorized System (DiSEqC / USALS)

Connect a coaxial cable to the IF input connector on the receiver and the other to the REC or receiver connector on the DiSEqC / USALS motor.

! Please refer to DiSEqC / USALS connection.



4. Function Guide

 
4-1 Channel Information

Every time you change channels, program information will be displayed for a few seconds.



The information may include :

- 1) Current time
- 2) Current channel number & name, satellite name & TP information
- 3) Symbol for CAS, Teletext, Alternate Audio, EPG, Parental lock information
- 4) Signal meter (Power, Quality)
- 5) Program information : Whenever you press the INFO button, the program information window will appear.
- 6) Resolution of the screen
(1080i, 720p, 576i, 576p, 480i, 480p)

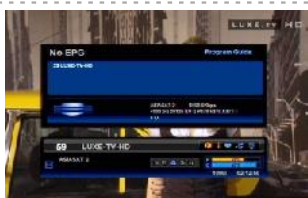

4-2 Changing Channels

You may change the channel by simply entering the channel number using your RCU 0~9 buttons. Alternately, you may use the ▲, ▼ buttons on the RCU and/or the front panel of the receiver.

4-3 Volume Control



Press ◀, ▶ buttons on the RCU to control the volume. The volume indicator will show whenever you control the volume on the screen for a few seconds and disappear automatically.

4. Function Guide



4-4 Channel List for TV/Radio/Favorite



Press **OK** to display the channel list on the screen. Select channel you want by moving the highlighted line using **▲, ▼, ◀, ▶** and press **OK**.

Press **♥** to open the favorite filter list and select one. (Refer to the **Favorite channel** menu in page 17 to set favorite channel.)



Whenever you press the **♥** button, Filter Box for favorite channel is opened automatically.

You can select a favorite channel on Filter box using **▶, ▲, ▼, ◀**.

(Refer to **Edit Channel** menu in page 16)

[Color Keys]



1) RED(FTA/CAS) :

Press **RED** button to open Filter box for FTA/CAS and select one using **▶, ▲, ▼** and press **OK**

2) GREEN(Satellite List) :

Press **GREEN** button to open Filter box for Satellite and select one using **▶, ▲, ▼** and press **OK**.

3) YELLOW(Sort) :

Press **YELLOW** button to open sort box and select one (Normal / Alphabetical) using **▲, ▼** and press **OK**.

-In case of selection of "Normal", you can sort channel using by numeric key on RCU.

-In case of selection of "Alphabetical", you can sort channel using by alphabetical key on RCU.



4. Function Guide

4-5 Program Guide



Program Guide shows the current and scheduled programs that are or will be available on each channel with a short summary for each program. Press EPG button, EPG box will be displayed on the screen. Press ▲,▼,◀,▶ buttons to check the information of other programs and channels. You can reserve the time of watching a TV program you want.



Select the program you want using ▲,▼,◀,▶. Press **RED** button to **ADD Event** of reserving program for watching, program name would be changed to RED color after adding event of program. Press **RED** button again to cancel the Event. (Refer to **Event Timer** in page20 for detail Event setting.)



Press **Green** button to move -24hours of EPG. Press **Yellow** button to move +24hours of EPG.


4-6 Teletext



The display of Teletext is based on the transmitted data using the EBU teletext specification and DVB Bitmap. It is available only when the current channel carries teletext service data. VBI insertion mode and OSD(On Screen Display) mode are supported.

In the VBI insertion mode, which is always on, can only be viewed on TV which supports teletext using your TV's RCU.

In the OSD mode, you can view teletext even though your TV does not support teletext.

To watch teletext in OSD mode, press  button on the RCU.

0 ~ 9 : Press page number.

▲,▼ : Page up and down.

◀,▶ : Page left and right list.




▲,▼ : Page number increase and decrease by 1.

4. Function Guide





4-7 Subtitles

 


You can see the  symbol active when the current channel provides subtitle service.
Press  button and select language you want in the language selection menu.
Press **OK** button to display subtitle on the screen in the language you select.
Press  button again to cancel.



4-8 A/V Selection

Quick adjustment for setting Audio / Video can be done by pressing Blue button in the viewing mode. You can use ,  buttons to change the setting modes of audio or video.

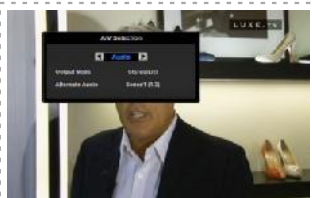

Output Mode : select the audio output mode among stereo(LR), Mono(LL) and Mono(RR)

Alternate Audio : select the audio channel in case that several audio channels input.



Alternate Video : select the video channel in case that several video channels input.



5. Main menu

5-1 Installation

You can install the TP Setup, Antenna positioning and the other related to Satellite Setup in this section.

Press **RED** button to delete the highlighted SAT.

Press **GREEN** button to add the SAT.

Press **YELLOW** button to rename the highlighted SAT.

Press **BLUE** button to search all TP in the highlighted SAT. Move to LNB Frequency, DiSeqC, Network Search, FTA only, PID Filter, 22KHz Tone, LNB Power using ▲, ▼, ◀, ▶ and adjust the types of them using ◀, ▶.

FAST SCAN



There are 3 groups of channels you might be interested in. Press F1, F2 or F3 button to select a group you want. The channels in the group you select will be searched and saved in channel list. Only the channels in the group you select will remain in channel list after FAST SCAN.

5-1-1 TP Setup



Select TP Setup using ▶, ▲, ▼ and press **OK**.

TP Setup box will show up on the screen.

Select Frequency, Symbol Rate, Polarity, Demodulation, Code, Pilot using ▲, ▼, ◀, ▶ and adjust the types of them using ▲, ▼, ◀, ▶.

Press **RED** button to delete the highlighted TP.

Press **GREEN** button to add TP.

Press **YELLOW** button to edit PID.

Press **BLUE** button to search all channels.

5-1-2 Edit PID (Yellow button in TP Setup)



Use this in case of a specific Transponder which has non-DVB standard channels and which only can be found when you have entered the necessary settings.

You can also add or delete channels from a specific TP.

PCR PID : Enter PID (Packet Identifier) for the PCR (Program clock Reference).

Video PID : Enter PID for the video signal.

Audio PID : Enter PID for the audio signal.

5. Main menu



5-1-3 Search All (Blue key in TP Setup)/TP Search



By pressing **BLUE** button in the TP Setup, this mode will search all channel of the satellite without regarding the frequency. By pressing Right(▶) button and adjusting the frequency or leave as it is, you can search the specific channel regarding the frequency you choose.

5-1-4 Antenna Positioning

Select Antenna Positioning using ▲,▼ button and press **OK**. Antenna Positioning box will Show up on the screen.

DiSEqC



Select **DiSEqC Motor** in Motor Setting box. Select appropriate Satellite, Frequency, and Step size (1,2,3,4STEP / Continuous) Select Move Dish menu and press ◀,▶ buttons to move West or East. Antenna will move to the direction you press (West, East) as per the Step Size you select in Step Size menu. Select appropriate option in Command Mode(Save, Reset, Go To Sat Position, Go To Position 0, Set East Limit, Set West Limit, Disable Limits, Enable Limits, Recalculate).

USALS



Select **USALS** in Motor Setting box. Move to Satellite and press **OK** to select Satellite. Press **RED** button to change the satellite position (My Longitude and My Latitude). Select Go To Position 0 in Command Mode for “Position 0” which is the imaginary point on the geostationary orbit of the satellite and press **OK**. Select Go To Sat Position in Command Mode for “Sat Position” which is calculated from the “Position 0” and press **OK**.

Use the Step Size and Move Dish commands to move the antenna if you want to manually control the antenna position.

*Unicable setting

-You can use “Unicable” using by ◀,▶ key in Motor Setting box. In this case, you can set frequency using by ◀,▶ key in SCR ID box and can set frequency using by numeric key, in detail.



5. Main menu

5-2 System Setting

5-2-1 Edit Channel

The factory set password is 0000.

You can edit channel lists in this section.

Press **RED** button to delete the selected channel.

WARNING box will display on the screen, select the type of deletion you want using **▲,▼**.

(Selected Channel : deletes only the selected channel / Selected TP Channel : deletes all channels in the same TP / Selected Sat. Channel : deletes all channels in the same satellite / All channels : deletes all channels)

Press **OK** to delete. Press **BACK** to cancel of deletion.



Move Channels

Select the channel you want to move to other position in the channel box using **▲,▼**.

Press **GREEN** button to move the channel you want.

Move the selected channel to where you want using **▲,▼**.

Press **OK** to confirm the position.

*Move Channel Group

-You can move channel group. Select channels, you want to move, using by F1 key and press GREEN key in where you want to locate.



Rename Channels

Select the channel you want to rename using **▲,▼**.

Press **YELLOW** button. Keypad will display on the screen.

Select the characters(A...Z, 0...9) using **▲,▼,◀,▶**.

Press **OK** for typing.

Select **OK** on the Keypad and press OK to save.



Channel Lock

Select the channel you want to lock using **▲,▼**.

Press **BLUE** button to lock the channel.

🔒 will show up at the end of the channel name.

5. Main menu



Favorite channel

Press **♥** to create and change the number of the favorite channel lists up to 8.

The favorite channel box will display on the screen and the number of favorite channel box will be changed as you repeat to press **♥**.

Select the channel you want to add using **▲,▼** and press **OK**.

The channel name you selected will display in the FAV box.

The information will be saved automatically as you go to other menu.

5-2-2 Parental Control



Parental Control

You can set the censorship classification or change the password.

Select the type of limitation using **◀,▶**.
(7/12/15/18/Lock All/ View All)



Change Password

Select Change Password and press **OK**.

New Password box will display. Enter the password and press **OK**.

Verify Password will display. Enter the same password as the new password.

Press **OK** to save.

5-2-3 Time Adjustment



The time set will be used as the standardized time for TV Guide, Wake up / Sleep time.

The current time is based on the TDT(time description table) in the stream of the current program(Automatic Update should be ON)

-Automatic Update ON : Set Time Offset with GMT and Daylight Saving Time.

-Automatic Update OFF : Select Date Setting / Current Time / Time Offset using **▲,▼**.

Press **OK** and numeric button for time, date, year or **◀,▶** for Month.



5. Main menu

5-2-4 Default Setting



This function will clear all settings to the factory default.
All satellite and transponder lists will be set to the factory default.
Press **OK** to execute the default Setting.
Press **BACK** to cancel and return to System Installation Menu.

5-2-5 System Information



This section displays the information of current hardware and software version, loader version, Manufacturer ID and update date.

5-2-6 Event Timer



There is four kinds of event type (Change CH/ Wake Up / Sleep / Record CH)
Press Green(Add) button to add event.
Select Event Type using ◀, ▶ button among Change CH, Wake Up, Sleep and Record CH.
Select Channel using **OK** button.
Select Mode using ◀, ▶ button among Once, Daily and Weekly.
Select Date using **OK** or ▶ button, press ▲, ▼, ◀, ▶ button to input Day, Month and Year.
Select Start Time using **OK** or ▶ button, press ▲, ▼, ◀, ▶ button to input time.
Select Duration using ◀, ▶ or numeric buttons.
Select Stop Time using **OK** or ◀, ▶ button, press ▲, ▼, ◀, ▶ button to input time.



5. Main menu



5-2-7 Software Upgrade by USB



- (1) Copy the latest firmware upgrade file to a USB flash drive.
- (2) Connect the USB flash drive to the USB port in receiver, and a window will be appeared in the TV Monitor.
- (3) Select the firmware upgrade file and press **OK** key on your RCU, and then the selected data are transferred to the receiver and upgrade

gets started. When the upgrade is completed, the receiver will be automatically rebooted. If you do not press any key on RCU for 5 seconds, the upgrade will automatically started with the presently selected firmware.

- (4) The upgradeable firmware is Program file and Channel data file

5-3 User Preference



Select appropriate settings by pressing Left/Right(◀/▶) buttons at each menu.

All the settings will be automatically applied by going back to the Main Menu.

- Menu Language : English / Arabic / Persian / Turkish / German / French / Spanish / Russian / Polish / Czech / Greek / Dutch / Portuguese / Hungarian / Italian / Slovak / Swedish / Slovenian / Bulgarian
- Audio Language : English / French / German / Italian / Russian / Turkish / Czech / Danish / Hungarian / Portuguese / Spanish / Swedish / Polish / Arabic / Persian / Finnish / Dutch / Rumanian
- Video Output : CVBS / RGB / COMPONENT
- Digital Audio : PCM / Dolby Digital
- TV Aspect Ratio : 4:3 / 16:9
- Display Format : Letterbox / Center / Full
- Display Time : 1~20 / Enable / Disable
- Transparency : 25% / 50% / 75% / Disable



 
5. Main menu

5-4 Common Interface



You can see the information of CAM in common interface of the receiver. Select the common interface you want and press OK. The information of CAM in common interface will displays on the screen.

5-5 USB Manager

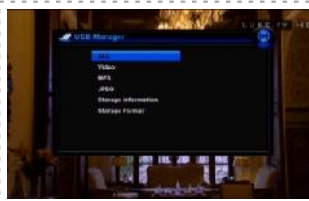

There are four types of list for different kinds of media files in USB storage device(ALL, Video, MP3, JPEG). You can check Storage Information and Storage Format in this menu. You can select appropriate menu by pressing OK button.

6. Personal Video Recorder



6-1. Recommended Device

- External USB Hard Disk Drive. (Recommended HDD : 7200RPM)
- USB Flash memory stick.
- Format Type : FAT16/FAT32 (The System does not support NTFS and other file system)

6-2. Recording function

6-2-1. Recording



Press ● button to start recording a program.

6-2-2. Stop recording



Press ● button or ■ button to stop recording. After then, it shows a message to ask whether you want to stop or not. Use **OK** button to stop recording and use **Back** button to continue recording.

6-2-3. Play mode

Recorded files(*.ts), MP3 and JPEG files can played with external USB memory (HDD).



File List

Press ► button to show file list.



6. Personal Video Recorder



Select a file

Use the ▲, ▼ button to select the file you want to watch and press **OK** button.



INFO window

During playing of recorded file, if you want to check file name, play time, total recorded time, press **INFO** button.



Stop playing

Press ■ button to stop playing. If you press **BACK** or **EXIT** button, then you can stop recording after selection of "**OK**" in the message window.

Change playing mode

Press **Green** button repeatedly to change playing mode in MP3 as **Repeat once**, **Repeat all**, **Repeat once within folder**, **Repeat all within folder**.

(Press **Green** button to start and stop **Slideshow** within folder during JPEG file playback.)

 


6-2-4. Trick Play Function



Fast foward

Press ►► button during playing of recorded file, the file will be played at 2X speed maximum up to 32X.

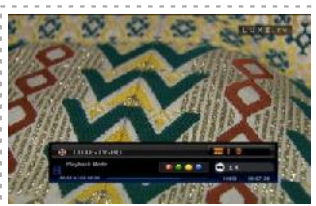

Rewind

Press ◀◀ button during playing of recorded file, the file will be rewind at 1X speed maximum down to 32X.

Skip forward

Press ► button during playing of recorded file, the file will be forwarded at 5% from current point.

Skip backward

Press ◀ button during playing of recorded file, the file will be back-warded at 5% from current point.



6. Personal Video Recorder

6-2-5. Function in List



Filter

In the file list, press **RED** button to show Filter window. You can select different media type for list as below.

- All: Show all supported file in folder.
- Video: Show all recorded files in PVR folder.
- MP3: Show all MP3 files in current folder.
- JPEG: Show all JPEG files in current folder.



Storage information

In the file list, press **GREEN** button to show storage information. You can check total size, occupied size and empty size etc.

*. You can see file list using by ► button while recording a program.



Delete

In the file list, press **YELLOW** button to delete file or folder. If you delete some folder, files in the folder will be deleted accordingly.



Format(Only HDD)

In the file list, press **BLUE** button to format HDD. This function is concerned only related to HDD.

6-2-6. Time Shift Recording function



You can perform Time Shift Recording function with using the trick play buttons while playing a program.

Press **T.SHIFT** button to start and stop Time Shift recording function.

Trick Play functions can perform in limited condition depends on the size of Time Shift Recording file.

7. Troubleshooting



There may be various reasons for abnormal operation of the unit. Therefore, if the unit does not work properly, check the unit according to the procedures shown in the table below.

Problem	Possible causes	What to do
*The display on the front panel does not light up.	*Main cable is not connected.	*Check that the main cable is plugged into the power socket
*No sound or picture.	*Wrong connection of the video/audio output to the TV input terminal. *Wrong connection of satellite antenna cable. *Wrong direction of satellite antenna.	*Connect two terminals correctly with a SCART cable or RCA or RF cable. *Connect the antenna cable correctly. *Adjust the direction of antenna.
*Black-and-White screen or V-Hold problem	*No signal or weak signal. *Wrong setting of channel information in System Installation Menu. *Your TV mode is different from satellite broadcasting mode.	*Check the cable connections LNB and other equipment connected between the LNB and the receiver or adjust the antenna. *Type the setting value correctly. *Use TV of same mode. Use a NTSC/PAL converter connected to the receiver TV.
*The RCU is not working	*Battery exhausted. *Fluorescent light interfering with the remote controller. *RCU is incorrectly aimed	*Change the batteries. *Switch off the light. *Aim the RCU at the receiver.



8. Technical Specifications

Tuner & Channel

Input Connector : F-type, IEC 169-24, Female

Frequency Range : 950MHz to 2150Mhz

Input Impedance : 75ohm or 75 . Unbalanced

Signal Level : -25 to -65dBm

LNB Power & Polarization : Vertical - +13V / Horizontal - +18V

Current : 500mA Max overload Protection

22KHz Tone : Frequency - 22KHz \pm 4KHz

Amplitude : 0.65V \pm 0.2V

DiSEqC Control : Version 1.0/1.1/1.2/1.3 compatible

Demodulation : DVBS-QPSK, DVBS2-QPSK, DVBS2-8PSK

Input Symbol Rate : DVBS 1-45 Ms/s

DVBS2-QPSK 20 - 45MSPS

DVBS2-8PSK 10 - 45MSPS

FEC Decoder : DVBS Code Rate 1/2, 2/3, 3/4, 5/6, 7/8 and Auto

DVBS2 Code Rate 1/2, 2/3, 3/4, 3/5, 4/5, 5/6, 8/9, 8/10 (QPSK)

DVBS2 Code Rate 2/3, 3/4, 3/5, 5/6, 8/9, 9/10 (8PSK)

MPEG Transport Stream A/V Decoding

Transport Stream : MPEG-2 ISO/IEC 13818

Transport Stream : Specification

Profile Level : MPEG-2 MP@HL, MPEG-4 part 10 H.264

Input Rate : 160 Mbit/s Max

Audio Decoding : MPEG / MusiCam Layer I & II

Audio Mode : Single channel / Dual channel joint stereo / Stereo

Sampling : 32, 44.1 and 48KHz

Memory

Main Processor : STi 7100 SH4 core(350MIPS)

Flash Memory : 8 MByte

Program DRAM : 192 Mbyte

Common Interface

2 full independent module capability common interface standard compliant

DVB_CI (CENELEC EN-50221)

Up to 20Mbits/s on Common Interface

Up to 100Mbits/s on Transport Stream

MPEG II Transfer Stream compliant

3.3V or 5V I/O buffer for direct interface with FEC and DEMUX lcs

8. Technical Specifications



A/V & Data In / Out

TV SCART : Output (CVBS, RGB, Component, Audio R/L)

VIDEO OUT : 1 X RCA Cinch

AUDIO OUT : 2 X RCA Cinch

S/PDIF : COAXIAL Digital Audio Output

RS232C : Transfer rate 115,200 bps / 9 pin D-sub Type

COMPONENT OUT (YPbPr) : 3 X RCA Cinch

USB 2.0 Master

HDMI

Power Supply

Input Voltage : 10.5V ~ 30VDC

Type : SMPS

Power consumption : Max. 45W

Standby mode: Less than 1W

Protection : Use Internal Fuse and Electric Shock Protection

Physical Specification

Size (WxDxH) : 280 x 215 x 50mm

Weight (Net) : Approximately 1.5 Kg,

Operating Temp : 0 °C to + 45 °C

Storage Temp : -10 °C to + 70 °C

Storage Humidity : 5% ~ 95% RH (Non-Condensing)

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

DENSON

DS400-HDM